



To Start the Control Panel:

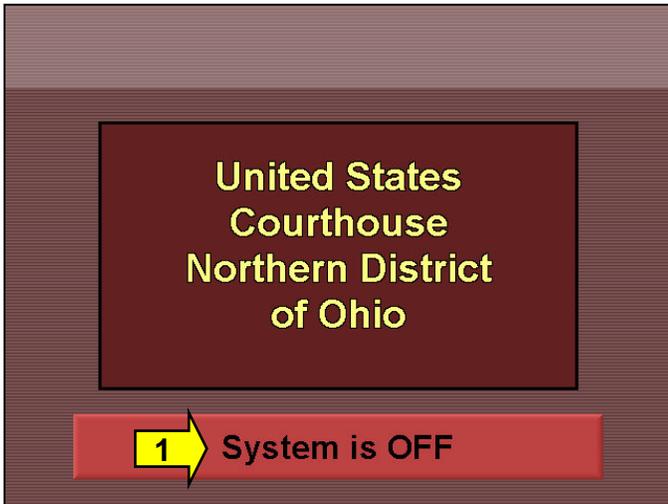

(1) System is Off: Indicates that the system is off. The cart does not have the ability to turn the system on. If the system is on, the **Main Page** will display instead.

Main Page:

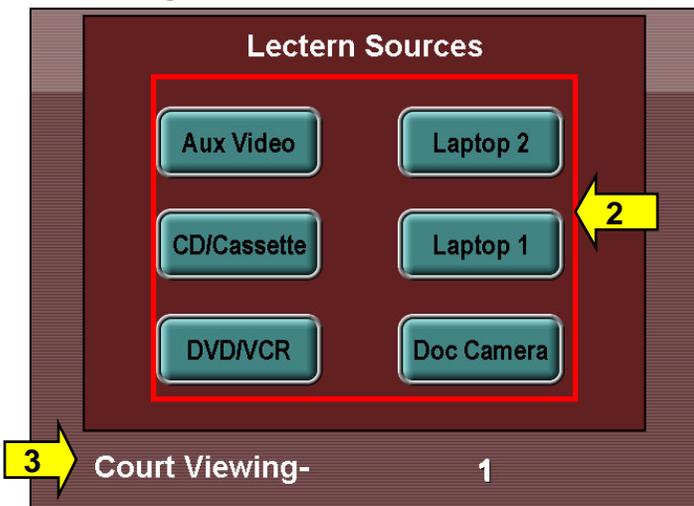

(2) Lectern Source Selection: Displays control screens for the equipment located at the lectern. Each controls screen provides volume controls, device controls (when applicable) and the option of sending the source to all courtroom monitors.

Sources at the lectern are:

- Auxiliary video input
- CD / Cassette player
- DVD / VCR player
- Laptop 2
- Laptop 1
- Document Camera


Access back to the Main Page is available on every screen by selecting the Main Page button:



(3) Court Viewing: Displays the current evidence that is being shown in the courtroom.

Aux Video:

The following screen is displayed when the **Aux Video** button is selected on the Main Page.

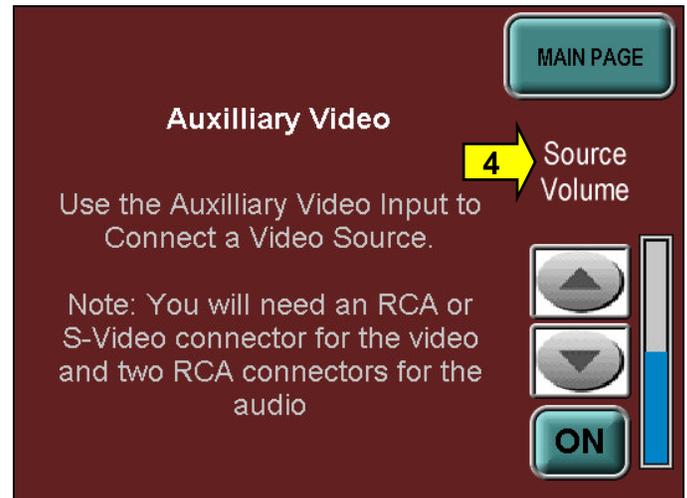

(4) Source Volume: Increases, decreases or mutes the volume of the device plugged into the Aux Video connection.



The **Up** button increases the volume level.




The **Down** button decreases the volume level.



The **On/Off** button mutes and unmutes the audio.

Laptops 1 and 2:

The following screen is displayed when the **Laptop 1** or **Laptop 2** button is selected on the Main Page.

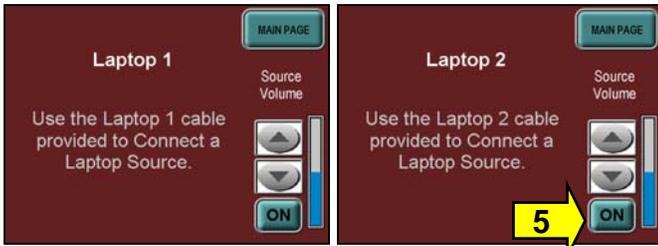

(5) Source Volume: Increases, decreases or mutes the volume of the selected laptop.



The **Up** button increases the volume level of the laptop.



The **Down** button decreases the volume level of the laptop.



The **On/Off** button mutes and unmutes the laptop audio.

Document Camera:

The following screen is displayed when the **Document Camera** button is selected on the Main Page.




(6) Document Camera Controls:

- **Positive/Negative:** Controls lighting for display of text or 3D objects (**Positive**) or x-rays or other negative images (**Negative**).
- **Freeze:** Retains the current image on the screen.
- **White Balance:** Corrects any color discrepancies.
- **Zoom In:** Enlarges the subject's image size.
- **Zoom Out:** Reduces the subject's image size.
- **Focus Far:** Adjusts to focus better on objects farther away from the camera lens.
- **Focus Near:** Adjusts to focus better on objects closer to the camera.
- **Auto Focus On/Off:** Toggles the automatic focus feature on and off.
- **Lamps On / Lamps Off:** Turns the document camera's lights on and off.


DVD / VCR:

The following screen is displayed when the **DVD/VCR** button is selected on the Main Page.

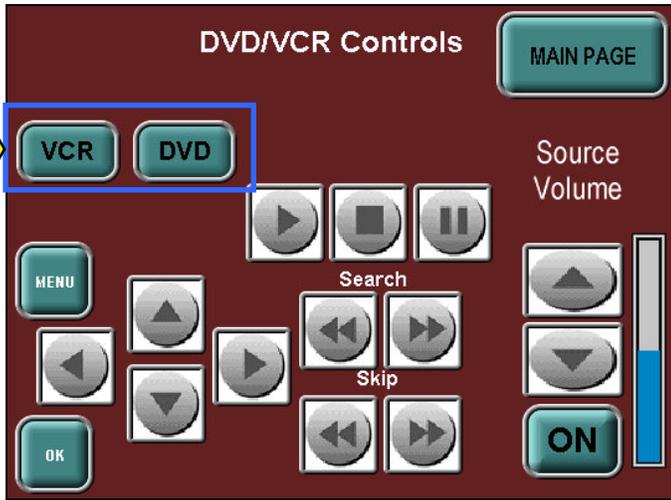

CD / Cassette:

The following screen is displayed when the **CD/Cassette** button is selected on the Main Page.

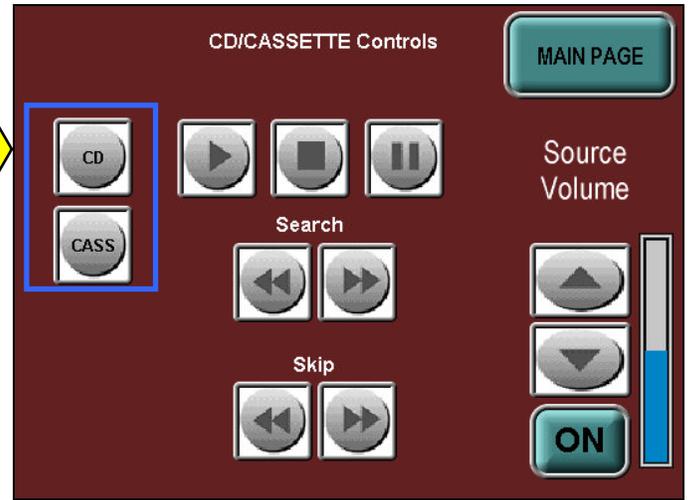

(7) DVD / VCR: Activates either the DVD portion or the VHS portion of the combination unit. Select which portion to activate before using the controls. A **red** box will appear around the active portion:



Play: Begins playback of the inserted media.



Stop: Stops playback of the inserted media.



Pause: Stops playback until the button (or **Play**) is pressed again.



Search Backward: Scans backward through the DVD or rewinds the video cassette to its beginning.



Search Forward: Scans forward through the DVD or fast forwards the video cassette to its ending.



Skip Backward: Skips backward through the chapters on the DVD.



Skip Forward: Skips forward through the chapters on the DVD.



Menu: Displays the DVD on-screen menu. Use the arrow keys to move to a selection, then press **OK** to confirm it.

(8) CD/Cassette: Activates either the CD player portion or the tape deck portion of the combination unit. Select which portion to activate before using the controls. A **red** box will appear around the active portion.



Play: Begins playback of the inserted media.



Stop: Stops playback of the inserted media.



Pause: Stops playback until the button (or **Play**) is pressed again.



Search Backward: Scans backward through the CD or rewinds the cassette to its beginning.



Search Forward: Scans forward through the CD or fast forwards the cassette to its ending.



Skip Backward: Skips backward through the chapters on the CD.



Skip Forward: Skips forward through the chapters on the CD.



The **Up** buttons increase the volume levels.



The **Down** buttons decrease the volume levels.



The **On/Off** buttons function as mute buttons.